



Class 43XX Mogul Steam Loco

How to get access to the PCB

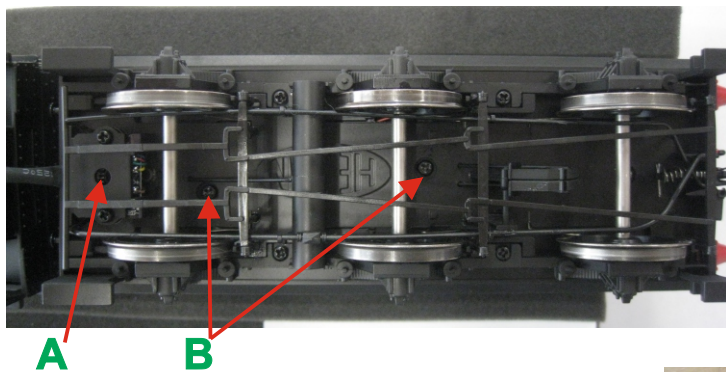

- 1) If wanted, release the tender, from the Loco, by removing screw **A** and unplug the wire between the loco and Tender.
- 2) Remove the 2 screws marked **B**.
- 3) The Tender body can now be removed and the PCB is revealed.

Tender body removed and PCB revealed


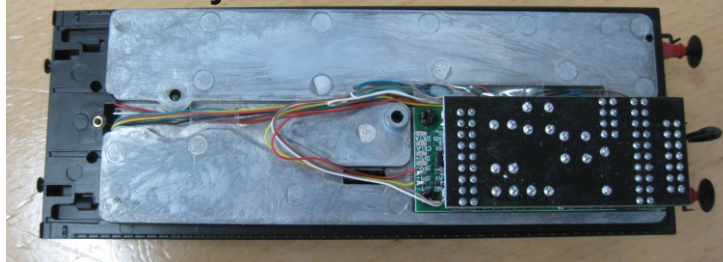


How to get access to the Motor

- 1) If wanted, release the tender, from the Loco, by removing screw **A** and unplug the wire between the loco and Tender.
- 2) Remove or turn the 2 bars marked **C** outwards, so it is clear of the Boiler.
- 3) Remove the Pony Wheel assembly.
- 4) Remove the 3 screws marked **D** and the 4 screws marked **E**
- 5) Carefully pull the Cab Handrails, marked **F** outwards or remove.
- 6) Carefully slide the Cab backwards. There are 3 locators connecting the Cab to the Boiler section. They will release when pulling Cab backwards.
- 7) The Boiler section cab now carefully be pulled of the Chassis cylinder, by pulling forward.


NOTE:

There are 2 wires connected to the chassis cylinder, so please be carefull when lifting the chassis slightly to help remove the Boiler.

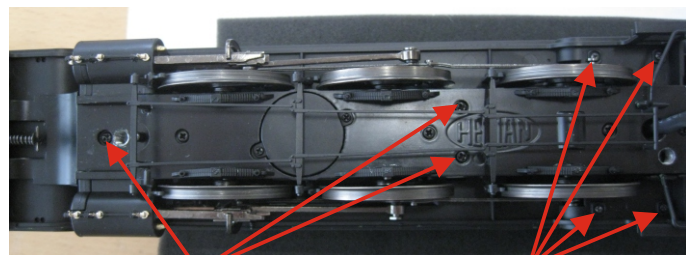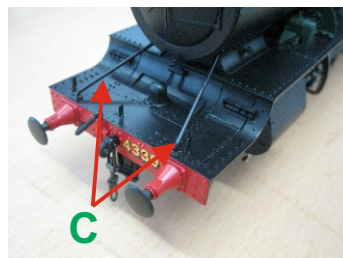


D (For Chassis release)

E (For Cab release)

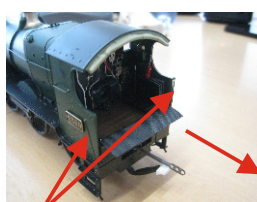

F

Pull Cab this way

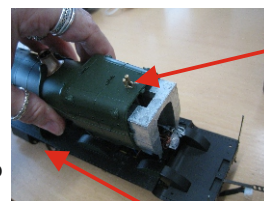

Pull Boiler section this way